


Huawei Access Switch Settings

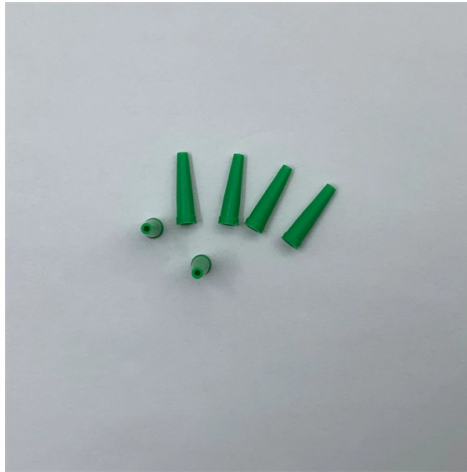

Overview

To log in to a switch through its console port, connect the serial port of your PC to the console port of the switch through a console cable, and then perform related configurations to manage the switch locally.

Key Takeaways

Huawei access switches can be configured via console, SSH, or WebUI to set management IPs, VLANs, port modes, and enable Telnet/SSH for network management.

Initial Access and Login

Connect to the switch using a console cable (USB-C or Mini USB) or via SSH if already networked. Open a terminal emulator (e.g., PuTTY) and set serial parameters: typically 9600 bps, 8 data bits, no parity, 1 stop bit, no flow control. Login using the default credentials: admin / admin@huawei.com for newer firmware.

Change the password immediately for security.

Management IP Configuration

Create a management VLAN (e.g., VLAN 5):
CodeCopy vlan 5
Assign the management interface to the VLAN: CodeCopy interface Vlanif 5[HUAWEI-Vlanif5]
ip address 192.168.1.

10 255. 255. 255.



0 Verify connectivity with ping to ensure the switch is reachable. User and Telnet/SSH SetupCreate a local user for Telnet/SSH access: CodeCopy[HUAWEI-aaa] local-user admin password irreversible-cipher YourPassword[HUAWEI-aaa] local-user admin privilege level 15[HUAWEI-aaa] local-user admin service-type telnet Enable Telnet or SSH on the switch to allow remote management.

VLAN and Port Configuration

Assign access ports to VLANs: CodeCopy interface GigabitEthernet0/0/1[HUAWEI-GigabitEthernet0/0/1] port link-type access[HUAWEI-GigabitEthernet0/0/1] port default vlan 10 Configure trunk or hybrid ports for uplinks: CodeCopy interface GigabitEthernet0/0/2[HUAWEI-GigabitEthernet0/0/2] port link-type trunk[HUAWEI-GigabitEthernet0/0/2] port trunk allow-pass vlan 10 20 30 Verify port configuration using display interface GigabitEthernet0/0/1. Layer 3 and VLANIF ConfigurationFor Layer 3 communication between VLANs, configure VLANIF interfaces on the core switch: CodeCopy interface Vlanif 10[HUAWEI-Vlanif10] ip address 10.

10. 1. 1 255.

255. 255. 0 Connect to an egress router for Internet access and configure the default gateway: CodeCopy ip route-static 0.

0. 0. 0 0.

0. 0. 0 1.

1. 1. 1 This allows the switch to act as a gateway for users.

WebUI AccessEnable WebUI by first configuring the management IP and user credentials via console. Connect a PC to the switch and access the WebUI using the management IP in a browser. Login with the configured user and password, then perform VLAN, port, and service configurations through the GUI.

Saving Configuration

After completing all configurations, save them to make them persistent: CodeCopy save Confirm the save when prompted to ensure settings are retained after reboot. Additional FeaturesIP Source Guard (IPSG) can be enabled on access ports to prevent unauthorized IP changes.

DHC

P relay or server can be configured for dynamic IP allocation. Spanning Tree Protocol (STP) should be enabled to prevent loops in campus networks. By following these steps, Huawei access switches can be fully configured for management, VLAN segmentation, Layer 3 routing, and secure remote access, suitable for small to medium campus networks.

Article Content

Configuring Console Port Login on a Switch (V200)

To log in to a switch through its console port, connect the serial port of your PC to the console port of the switch through a console cable, and then perform related configurations to manage the switch locally.

How To Configure WebUI Access to Huawei S5700 Switch

To access the S5700 switch via the WebUI, a few configurations must first be made via the console. Here we describe step by step the configurations required to enable access via a browser.

How to Enable Ports in Huawei Switch? Could Open Ports Unlock

This guide dives into the step-by-step process of port configuration on Huawei switches, while addressing the often-overlooked question: Does opening ports inadvertently create backdoors

Basic CLI Commands on Huawei Switch

The text covers tasks such as creating a user, VLAN configuration, port settings, enabling SSH and Telnet services, configuring Spanning Tree Protocol (STP),

Huawei Switch Configuration Guide | PDF | Internet Protocols

The document provides configuration instructions and commands for basic switch configuration using Huawei switches. It covers topics such as changing the hostname, configuring user accounts and

Huawei Switch Basic Configuration Step by Step

📺 In this video, I will show you step by step on how to configure Huawei switch using an actual device with the latest firmware version. 📺 We will go through the very basic configuration ...

Access port config (Huawei)

How to set access port config on Huawei switch? An access port belongs to and carries the traffic of only one VLAN within 2-layer switch. Traffic is both ...

huawei switch cheat sheet · GitHub

Access the switch console or CLI: Connect to the switch console using a terminal emulator or access the switch CLI remotely through SSH or Telnet. Enter privilege mode: If you're

Huawei S Series Quick Configuration

Small-Sized Campus Networks This section uses the S2750 as an access switch (ACC1), S5700 as a core switch (CORE), and an AR series router as an egress router (Router) as examples to

How to enable or disable switch access

Switch access allows people with motor impairments to operate the Huawei smartphone and other mobile devices using one or more switches. With the help of switches you can select

Huawei Network Switch Configuration guide | Step-by-Step CLI

In this video, I walk you through the complete configuration of a Huawei S5700 switch, covering: System View Mode Hostname and VLAN Interface IP Addressing Access & Trunk Port Setup Static Routing ...

Huawei S Series Quick Configuration

View and Download Huawei S Series quick configuration online. Campus Switches. S Series switch pdf manual download. Also for: S2750, S5700.

Huawei Switch Configuration Tutorial Basic

Shahed Israr is a Network Engineer specializing in GPON, FTTH, and telecom access network technologies. With hands-on experience in Huawei OLT and ONT configuration, U2000

Master the Basic Command Configurations of Huawei, H3C, Ruijie,

As technology advances, networking switches have become an integral part of the IT infrastructure. They play a crucial role in directing communication on the network and ensuring

HUAWEI eKitEngine S210I Series Extended-Temperature Switches

Product Overview Huawei eKitEngine S210I series extended-temperature switches (S210I for short) are Layer 2 switches that are independently developed and controllable. The switches provide flexible

How to Configure an Access Port for Data VLAN on Huawei Switch

☐☐ Welcome to our Huawei Networking Tutorial Series! In this video tutorial, you'll learn how to configure an access port for Data VLANs on Huawei network devices. Whether you're preparing for a ...

Configuring Access Port and Trunk Port on Huawei Switch

In this tutorial, we will guide you through the process of configuring access and trunk ports on Huawei Switches. We will explain the difference between access and trunk ports, and show you how to ...

Huawei switch configuration step by step

How to configure the Huawei Switch configuration Learn the configure Huawei switch from the Basic. Lets help to make 1000 subscribers ☐☐ Huawei Switch config C...

Related Video Reference

This video was associated with the source search result. Verify technical details against current product documentation and project requirements.

Contact Us

Continue your research online:

Website: <https://cgweb.co.za>

Technical inquiry: <https://cgweb.co.za/project-enquiry.html>

This document is for preliminary research. Verify specifications against current standards, product documentation and project requirements.

